



## Set-Up Instructions

**Nomadic**  **XPlus™**


Set-Up Instructions

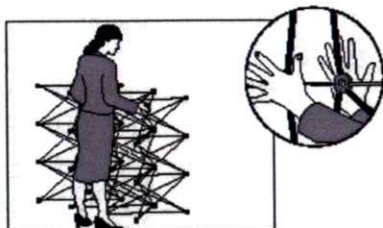

Pull open frame and lock it by pushing the hubs together.

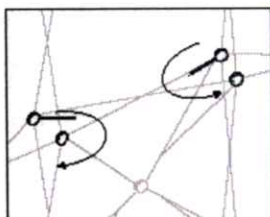


Secure manual locks by sliding hook ends into slots located in opposite hubs.

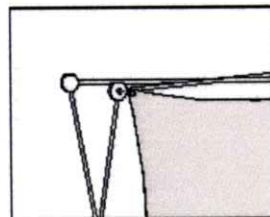


Attach graphics by slipping the grommet holes in the corners of the fabric panels over the studs


### Accessories

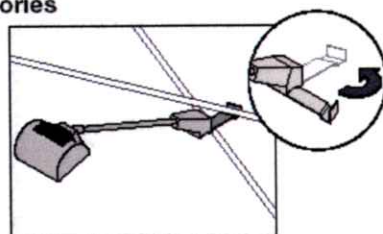

If lights are purchased: to the right of the scissors' center, hook the bracket under the rear tube and over the front.

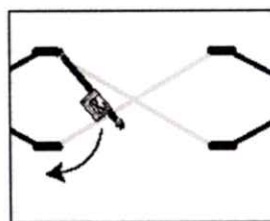

If shelves are purchased: add removable manual locks to the hubs at the bottom of the quad.

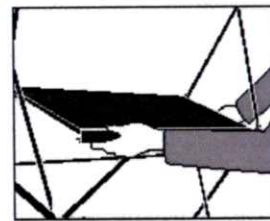

Place shelf down onto frame scissor. Maximum shelf load: 20 lbs / 9.07 Kgs.

Revised: September 16, 2005

North America: 800.732.9395 • Europe: +353.98.6011

**Nomadic**  **Display®**



- *Note – the top corner skins of the 9-panel stand have 3 connections on the front of the stand, and the top corner connection on the back – giving a twist effect.*